



# CONTRACT INTERIOR, TRANSLATIONS, TIMBERLINE, TIMBERLINE ACOUSTIC & CONTRACT INTERIOR ACOUSTIC MAINTENANCE TIPS

## Initial Care:


After installation is completed:

1. Remove all debris (electrostatic mop or vacuum)
2. Damp mop using a pH 7.0-8.5 neutral cleaner (Armstrong ONCE 'N DONE)


Allow 48 hours before carrying out the following:

1. Mop using electrostatic dust mop or vacuum
2. Damp mop or light scrub if necessary.  
(Scrub with a 175-400 rpm machine, red or pre-burnish pad and neutral cleaner (Armstrong ONCE 'N DONE).
3. Dry Burnish – this process enhances floor protection.
4. Spray buffing should only be carried out when deemed necessary using a 350-800 rpm rotary machine fitted with a red pad.

## Ongoing Care:

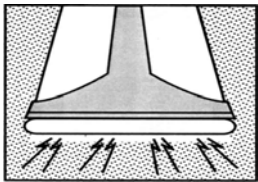


Static Mop / Vacuum  
**DAILY**

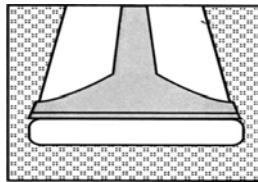


Damp Mop  
**REGULAR**

OR

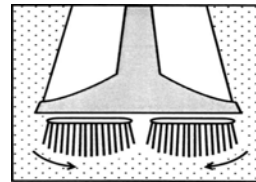

Scrub  
**REGULAR**

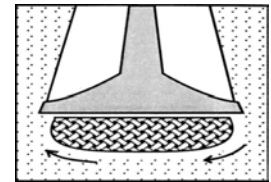

Dry Burnish  
**AS REQUIRED**

## Routine Maintenance:

Sweep regularly and mop regularly using a neutral detergent (Armstrong ONCE N' DONE). Frequency and type of function depends on traffic flow, environmental conditions, access and customer requirements. Frequency may need to be adjusted depending on the prior conditions, especially if a light colour has been chosen.

## As Required:

Dry buffing will restore dull, worn spots and increase the cleanability of the floor. If burnishing is required undertake in unobstructed areas only. This should be carried out on CLEAN surfaces.

## Prevention:

Ensure adequate protective matting is used at entrances, more dirt stopped at the entrances means less dirt trafficked through the building. Sand and grit are abrasive and damage floors. Ensure adequate protection is afforded under furniture.

## Stain Removal:

Treatment should be carried out when stains are fresh. Use a white or red pad in combination with a neutral floor cleaner. After stains have been removed wipe floor with clean water.

## General Hints:

1. **DO NOT USE** benzene, toluol, acetone, trichloroethene, thinner, oilwax or strong scouring powders as these will damage the floor.
2. Auto scrubbing in unobstructed areas takes approximately 20% of the time of damp mopping. For maximum efficiency use damp mopping in obstructed areas only.
3. Spot mopping / spot scrubbing should be used when necessary. **Spillages** – post wet floor signs and wipe up immediately. Allow to dry and remove signs.
4. All resilient flooring should be protected during the construction period (use Armstrong TOPGARD).
5. Removal of trademark can be carried out using water and a soft cloth.

## For further Armstrong information:

Freecall 1800 632 624  
[www.armstrong-aust.com.au](http://www.armstrong-aust.com.au)